


ASSEMBLY INSTRUCTIONS

for BirdsChoice Purple Martin House

Coates Original PMC8, PMC12, PMC16

Tools Needed: Phillips screwdriver, 5/16 wrench, pliers or adjustable wrench

1 Attach the galvanized divider stamped "A" to the top of the floor panel (across short side) on the side stamped "UP" and **through to the base plate** under the floor panel with 2 screws and 2 nuts (nuts always with white nylon insert out), do not tighten. This is an important first step--**don't forget the base plate on the bottom!!**

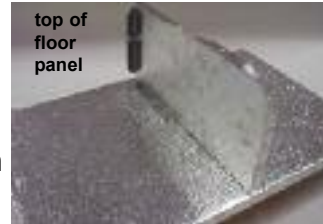


2 Place the galvanized divider stamped "B" with slot down in the slot of the "A" divider and secure with 2 screws through the floor and base plate. Tighten all 4 screws. NOTE: Galvanized dividers go on the bottom floor only.



3 Place 1 white side panel with the stamped "UP" facing up on the floor assembly and attach with 2 screws and nuts to the floor panel and 1 screw and nut through divider "A". Repeat this step on the other side.

4 Place the next floor panel on top of the completed floor unit. Repeat the instructions for placing and attaching the "A" divider and other divider (no marking). Secure with screws and nuts through the new divider, the floor and the lower dividers. Attach 2 more white side panels as in Step 3.

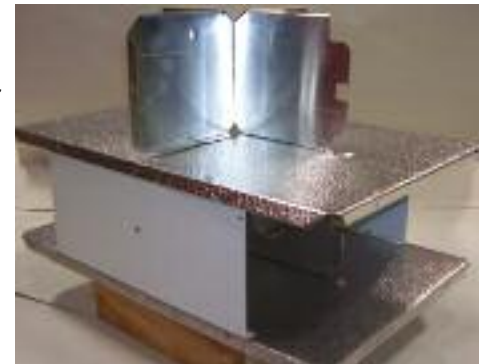

5 Repeat Step 4 for each floor unit. Example: 3 floor units for PMC12 model.



6 Attach the ceiling plate (with the stamped "UP" facing up) with 8 screws and nuts through the plate, side walls and interior dividers.



7 Attach 2 rail clips with screws and nuts on each side of the outside of the white panels (loop of clip facing **outward**). Do not tighten. Turn the loop of the clips up, center the 19" rod along the side and snap onto the clips on each side. Tighten the 4 screws. Repeat on all floors.

8 Attach the roof assembly to the house at the 4 screw locations.





9 Insert tabs of porch divider into door slots and twist slightly.

10 Install each door to the **INSIDE** of the wall panels, vents to the top. It is important to have the door up when doing this. Tighten each side enough to allow each door to remain open, but not so tight that it binds when opened & closed. **ALWAYS** swing the porch dividers to the right when opening the doors. This is how you will

check the nest by opening and closing these doors.

11 Attach 2 clips with screws and nuts on the short sides, but face the loop of the clips **inward**. Turn the loop of the clips up, center the 12" rod along the side and snap onto the clips on each side. Center and tighten the 4 screws.

Swing the porch dividers to the front and lock into the indent of the floor panel. The front dowel clips can be adjusted inward so that the rail will lock the porch divider in the indent securely.

DOOR PLUGS: The door plugs are used to keep the sparrows from taking over the house while the martins are wintering in South America.

12 To attach top perching rail, rotate the clips so the loop is at the peak of the roof. Center and snap the top perching rail into place.



Shown assembled is the PMC12 - 3 Floor Coates Original

Your house is now ready for the mounting pole.

Thank you for purchasing one of our fine products. If you have any questions or would like more information, please contact us at the toll free number below. Visit our website www.birdschoice.com for information and to see more of our professional outdoor birding supplies.

1-800-817-8833

Proudly made in Chilton, Wisconsin, USA according to BirdsChoice quality standards and specifications

BIRDS choice™

professional outdoor bird supplies

477 Vogt Lane, Chilton, Wisconsin 53014